


**Cooking with hot oil over an open flame can be dangerous. To make your experience with the Deep Fryer Helper an enjoyable one, you need to take these precautions and follow the directions below.**

## Setting up the Deep Fryer Helper

Remove two grates (left or right side) and the flame tamers (the angular metal pieces covering the burners). Place the Deep Fryer Helper in the grill as shown in the figure at right.

**NOTE: Never use the Deep Fryer Helper over a sear zone infrared burner.**

Place the thermometer in the shaft located at the front of the Deep Fryer Helper.

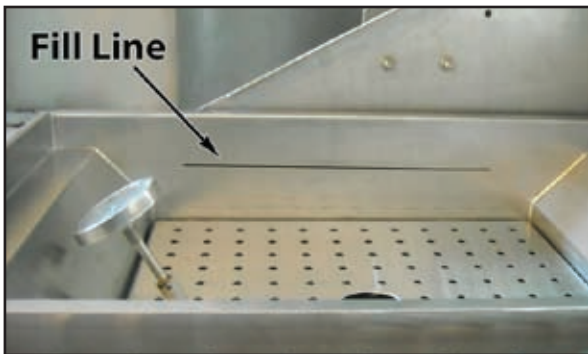

## Deep Frying

1. Fill the Deep Fryer Helper to the fill line (about 12 to 13 cups or about 6 liters). Be careful not to spill oil onto the burner as damage and/or fire will result.

**DO NOT OVER-FILL THE DEEP FRYER HELPER.**

2. Light the grill and set the burners at low temperature. Heat the oil for about 30 minutes. Wait until the thermometer shows the oil at the optimum frying temperature, between 350° - 375° F.



## WARNING!

HOT OIL AND STEAM CAN BE DANGEROUS.

ALWAYS WEAR OVEN MITTS WHEN USING THIS ACCESSORY. ALLOW UNIT TO COOL COMPLETELY BEFORE REMOVING.

DO NOT PLACE THE COVER ON THE DEEP FRYER WHILE THE BURNERS ARE ON.

IF OIL BEGINS TO SMOKE, IMMEDIATELY TURN OFF BURNER. IN CASE OF FIRE, TURN BURNER OFF AND EXTINGUISH WITH A CLASS A, B, C & D FIRE EXTINGUISHER.

KEEP SMALL CHILDREN AWAY! SEVERE BURN HAZARD.



OIL CAN CATCH FIRE IF OVERHEATED. DO NOT ALLOW THE OIL TEMPERATURE TO EXCEED 450° F! NEVER USE THE FRYER WITH A BURNER SET TO HIGH.

3. Add food to the fry basket and place the basket into the oil.



**Do not deep fry frozen poultry in the Deep Fryer Helper.**

4. After food has fried for a sufficient time, lift the fry basket out of the oil and allow it to drain. SEE EXAMPLE AT RIGHT. Remove food to an appropriate vessel and return the fry basket to oil. Repeat as needed.
5. When finished frying, turn off the burner and allow the grill, the Deep Fryer Helper and the oil to cool completely before attempting to remove the unit. Dispose of used cooking oil appropriately.



DO NOT CLOSE GRILL HOOD WHEN USING THIS ACCESSORY. DO NOT USE THIS ACCESSORY IN COMBINATION WITH THE GRIDDLE, OR ANY OTHER ACCESSORY THAT WOULD RESULT IN MORE THAN 75% COVERAGE OF THE GRILLING AREA AS OVERHEATING CAN DAMAGE YOUR GRILL.



WARNING! NEVER PUT WATER ON A HOT OR FLAMING OIL!



DO NOT EVER PLACE BASKETS ON GRILL RACKS.



The Deep Fryer Helper can also be used as a steamer, allowing you to steam or boil food.

## Steaming

1. Add water to just below the level of the steaming plate. Be careful not to spill water onto the burner as damage will result.
2. Place the lid on the Deep Fryer Helper.
3. Light the burners and bring the water to a boil.
4. Reduce heat, remove the lid and add food for steaming.

Periodically check the water level. Add water as needed.

When food reaches desired doneness, carefully remove the lid and remove food from the Deep Fryer Helper with long-handled tongs or a slotted spoon.

## Boiling

Follow instructions for steaming but do not insert the steaming plate. Add as much water as necessary to cover the foods being cooked, but never fill the Deep Fryer Helper more than halfway.



The Deep Fryer Helper must not have oil in it when being used as a steamer.

NEVER HEAT OIL AND WATER TOGETHER!

NEVER ATTEMPT TO REMOVE THE DEEP FRYER HELPER FROM THE GRILL WHEN HOT. ALLOW IT TO COOL COMPLETELY BEFORE MOVING OR CLEANING.